NELSON[™] HEAT TRACING SYSTEMS INSTALLATION PLT-LPM POWER CONNECTION KIT WITHOUT ENCLOSURE INSTRUCTIONS

DESCRIPTION

The PLT-LPM Power Connection Kit without Enclosure is for use with all versions of Nelson Heat Tracing Systems' LT, CLT, HLT and NC heater cables. Compatible for use with any vendor's heater cables smaller than 11mm (0.44") diameter.

Power Termination

KIT CONTENTS

- 1 Conduit Locknut
- 1 Sealing Grommet
- 1 Stand-off
- 1 End Seal
- 1 Tube of Silicone
- Power Termination
 Box Adapter
- Box Adapter
 Terminal Block
- 1 Gasket
- icone 1 Uninsulated Splice
- Connector
- Terminal Block Silicone Box Cover Gasket Box Cover Ground Locknut *Junction Box *Conduit & Drain *Flex Conduit *Heater Cable Conduit Locknut abel Gasket Box Adapter **Sealing Grommets J-Grommet - Overjacket Products B-Grommet - Base Products Sealing Grommet U-Grommet - Double Entry or non-standard construction (For dual connections 1 additional power termination and end seal have been included in this kit.) Stand-off *Insulated Ground Wire End Seal Heater Cable; braid optional For Braided Heater Cables Only: (see warnings) Uninsulated Splice Connector (CSA - Ordinary Areas Only) *Pipe Clamps

***ITEMS NOT INCLUDED IN KIT**

(Customer supplied junction box must be approved for this application.)


Note: This detail shows external grounding of braid. For internal grounding of braid (overjacket product), see sheet 8.

Δ warnings:

- Canadian Div. 2 Hazardous installations must use internal ground connection of braid. See sheet 8.
- Article 427 of the National Electric Code requires that all heaters shall have metal coverings and be provided with branch circuit ground-fault protection.
- If nuisance tripping of ground fault breakers occurs due to condensation in the junction box, electrical connections should be moisture proofed by use of a coating or sealant.

PLT-LPM POWER CONNECTION KIT WITHOUT ENCLOSURE

STAND-OFF POSITIONING

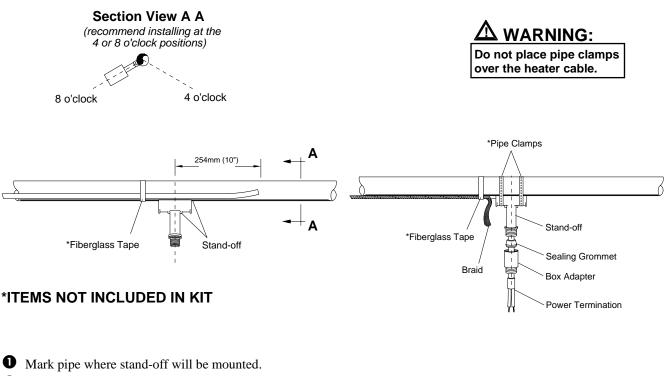

2 For External Braid Connection - CB Products only:

- Remove braid from heater cables, back to the point the cables leave the pipe. See Sheet 3.
- Proceed to step 3 below.

For Internal Braid Connection - CB, J or JT Products:

• Proceed to step 3 below.

TULSA. OK 74101

- Place stand-off on pipe and fasten with pipe clamps.
- **6** Slide the sealing grommet over heater cable and position inside stand-off opening.
- Apply silicone around the heater cable on top of the sealing grommet and fill any voids in sealing grommet.

TEL 918-627-5530

FAX 918-641-7336

www.nelsonheaters.com

Slide the box adapter over the heater cable and tighten securely to stand-off.

- Prepare heater cable for power termination: for braided products, see sheet 3.
 for overjacket products, see sheet 4.
 for base products, see sheet 5.
- **9** Terminate heater cable, see sheet 7.


P.O. BOX 726

GA-1887 Rev. 3 Sheet 2 of 8 September 2005

³ Push heater cable through the bottom opening of stand-off.

NELSON[™] HEAT TRACING SYSTEMS PLT-LPM POWER CONNECTION KIT WITHOUT ENCLOSURE

BRAIDED PRODUCTS

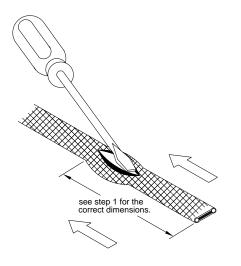


• For External Braid Connection:

Move braid back 305mm (12") to create a bulge.


For Internal Braid Connection:

Move braid back 127mm (5") to create a bulge.

2 At the bulge, separate the braid to make an opening.

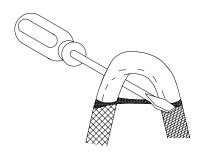


• While bending the heater cable, work it through the braid opening.

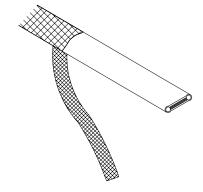


- **4** Pull the braid tight.
- S Proceed to "LT, CLT & HLT Products", sheet 5.


PLT-LPM POWER CONNECTION KIT WITHOUT ENCLOSURE INSTRUCTIONS

OVERJACKET PRODUCTS

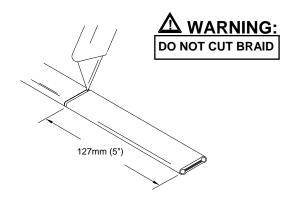


- Lightly cut around heater overjacket 127mm (5") from the end. Bend cable to break overjacket.
- Lightly cut overjacket up the center between first cut mark and the cable end. Bend cable to break overjacket.

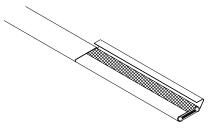


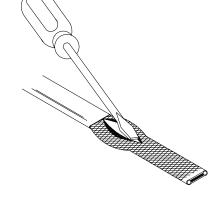

• At the bulge, separate the braid to make an opening.

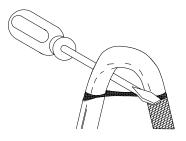

• While bending the heater cable, work it through the braid opening.

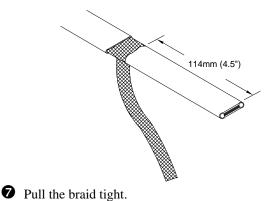


Proceed to "LT, CLT & HLT Products", sheet 5.

www.nelsonheaters.com

FAX 918-641-7336

B Remove overjacket from heater cable.

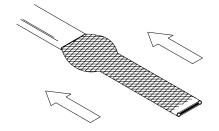

• Move braid back toward the overjacket, creating a bulge.

TULSA, OK 74101

TEL 918-627-5530


P.O. BOX 726

GA-1887 Rev. 3 Sheet 4 of 8 September 2005


PLT-LPM POWER CONNECTION KIT WITHOUT ENCLOSURE INSTRUCTIONS


BASE LT, CLT & HLT PRODUCTS

(See sheet 6 for an alternate method of HLT products.)

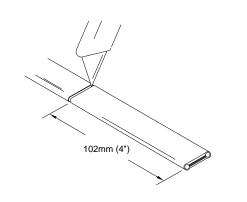


- Lightly cut around heater outer jacket 102mm (4") from the end. Bend cable to break outer jacket.
- Lightly cut the outer jacket up the center between the first cut mark & the cable end. Bend cable to break outer jacket.

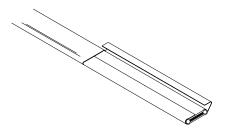

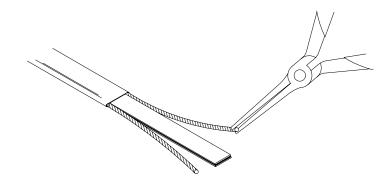


• Starting at the end, pull each bus wire away from the core material.

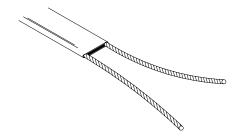

- **6** Remove exposed core material.
- \bullet Cut 6mm (0.25") off the end of each bus wire.
- **8** Proceed to "Power Termination", sheet 7.

3 Remove the jacket from the heater cable.

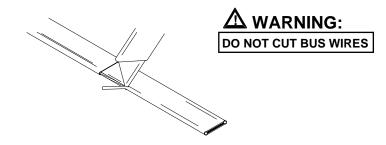


Shave the core material from the outside of each bus wire.


PLT-LPM POWER CONNECTION KIT WITHOUT ENCLOSURE

INSTALLATION INSTRUCTIONS


HLT PRODUCTS ALTERNATE METHOD

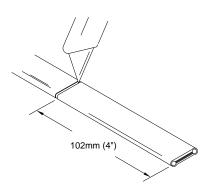

- Lightly cut around heater outer jacket 102mm (4") from the end. Bend cable to break outer jacket.
- 2 Lightly cut the outer jacket up the center between the first cut mark & the cable end. Bend cable to break outer jacket.

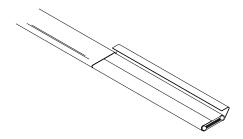


3 Remove the jacket from the heater cable.

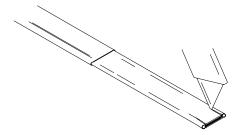


TULSA. OK 74101


TEL 918-627-5530

4 Make a cut inside each bus wire.

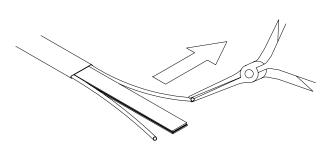

Starting at the end, in the same plane as the cable, pull each bus wire away from the core material.

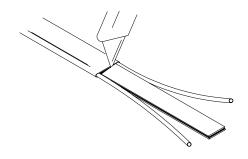

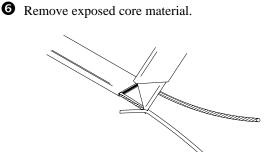

Remove the remaining core material off the outside of each bus wire.

www.nelsonheaters.com

8 Cut 6mm (0.25") off the end of each bus wire.

9 Proceed to "Power Termination", sheet 7.

FAX 918-641-7336

P.O. BOX 726 GA-1887 Rev. 3

GA-1887 Rev. 3 Sheet 6 of 8 September 2005


NELSON[™] HEAT TRACING SYSTEMS **PLT-LPM** POWER CONNECTION KIT WITHOUT ENCLOSURE INSTRUCTIONS


INSTALLATION

POWER TERMINATION

WARNING:

- Bus wires must not touch or cross while inserting into power termination / end seal.
- Only power terminations / end seals specifically approved for the vendor's style and type of heater cable must be used.

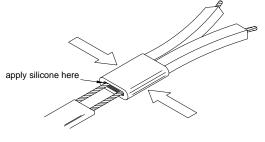

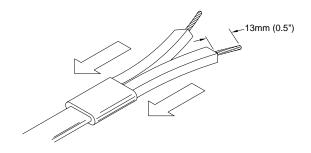


3 Push power termination to overlap jacket.

At this point, if you're installing the end seal, see 4 the "End Seal" section below. Otherwise, proceed to "Power Connection", sheet 8.

- Insert bus wires into power termination. O
- Squeeze power termination opening and fill with 0 silicone.

END SEAL

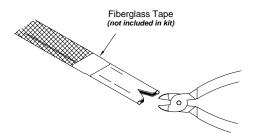

O Braided Products:


Cut braid back 25mm (1") & tape in place with fiberglass tape (not included in kit).

Overjacket Products:

Remove 13mm(0.5") of overjacket exposing the braid, then remove the 13mm (0.5") of exposed braid.



2 Make a 10mm (0.4") cut at the end of the heater cable.

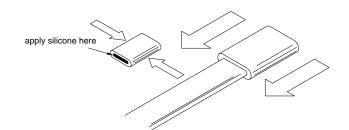

- **3** Squeeze the end seal and fill with silicone.
- **4** Push end seal over the heater cable.

Overjacket Products:

The end seal should overlap the overjacket.

- **5** The silicone will set up in about 30 minutes with a complete cure after 24 hours.
- **6** Proceed to "Power Connection", sheet 8.

WARNING:

FAX 918-641-7336

- Do not megger or hi-pot until silicone is completely cured.
- Braid must be kept away from bus wires or shorting will occur.


P.O. BOX 726

TEL 918-627-5530

www.nelsonheaters.com

PLT-LPM POWER CONNECTION KIT WITHOUT ENCLOSURE INSTRUCTIONS

POWER CONNECTION

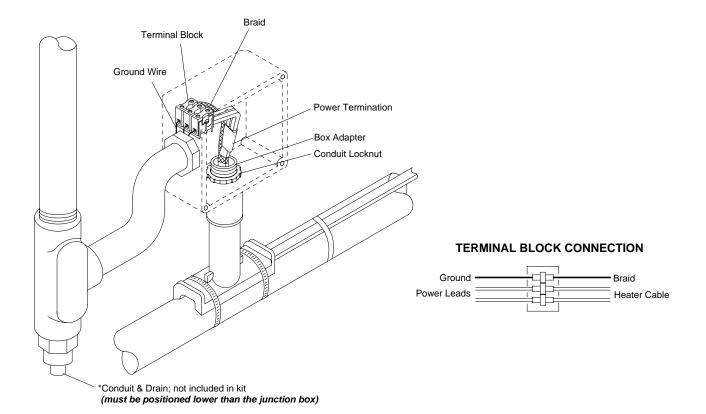

Note: This detail shows internal grounding of braid.

- **1** Place gasket on box adapter.
- **2** Position junction box on box adapter and secure it with the conduit locknut.
- **3** Connect bus and power wiring together using crimp connectors. *See diagram above.*
- **4** Ground connection:

For External Ground Connected Heaters:

• Connect ground braid to the ground wire using the uninsulated splice connector. See diagram on sheet 1.

For Internal Ground Connected Heaters:

• Connect ground wire and braid to the terminal block. See diagram above.

5 For Overjacket J or JT Products Only:

Apply silicone at point braid leaves the overjacket

- Push all wires and cable inside junction box.
- Place the box cover and box cover gasket onto the junction box.

Nelson Heat Tracing Systems products are supplied with a limited warranty. Complete Terms and Conditions may be found on Nelson's website at www.nelsonheaters.com.

FAX 918-641-7336

P.O. BOX 726		TULSA, OK 74101		TEL 918-627-5530	
--------------	--	-----------------	--	------------------	--